



Smart My-Link®

All **MX-Series** and all **Z-Series** components are equipped with **Smart My-Link®**. A **Smart My-Link®** system, which must include an Integrated Amplifier (or Preamplifier) and may also include a CD player, a DVD player, a Tuner and a separate Power Amplifier, offers the following features:

i) **Start-on-Play** (CD and DVD)

Press play on the CD or DVD player (or the relevant remote control) and both the relevant player and amplifier will switch out of standby (if necessary) and play the disc in the player. The amplifier will automatically select the correct source (CD or DVD).

ii) **Start-on-Open** (CD and DVD)

Press open/close on the CD or DVD player (or the relevant remote control) and both the relevant player and amplifier will switch out of standby (if necessary) and the CD or DVD drawer will open. The amplifier will automatically select the correct source (CD or DVD).

iii) **Intelligent Input Selection** (Amplifier)

Press a source select button (Tuner, CD or DVD) on the amplifier's remote control and the system will awaken (if in standby) only the amplifier and the selected source (e.g. CD).

iv) **Mute / Pause Control** (Amplifier/CD or DVD)

When the CD input on the amplifier is selected, pressing MUTE on the amplifier's remote control will mute the amplifier *and* pause the CD. Similarly, when the DVD input on the amplifier is selected, pressing MUTE on the amplifier's remote control will mute the amplifier *and* pause the DVD. When the amplifier mute is cancelled, the CD/DVD will continue playing.

v) **Power-Saving Mode** (Amplifier)

When a number of Smart My-Link units are connected to a Smart My-Link amplifier, the amplifier will switch into standby whichever units (Tuner, CD or DVD) remain unselected for more than ten minutes. For example, if the whole system is switched out of standby together and the user has the Tuner input selected, the CD and DVD players will both be automatically switched into standby after 10 minutes.

vi) **Automatic Switch-On** (Tuner, CD or DVD)

If the standby button on the Tuner, CD or DVD player is pressed, the amplifier will also awaken (if in standby) and select the correct input.

vii) **Alarm operation** (Tuner)

Alarm times are set using the tuner menu and the system then switched into standby. When the predetermined time is reached, the system (only amplifier plus one source) will switch out of standby and play either a CD or the tuner programme – depending how the alarm was set up. An alarm off time is also set, so the system will switch off again at the specified time.

Notes:

- In the text above "awaken" means switch out of standby into normal operating mode.
- If a Power Amplifier is included in the system it will switch into/out of standby in synchronism with the Integrated Amplifier (referred to above simply as "amplifier" above for brevity)